


# Operating Instructions For 4 in 1 STB Remote Control

UR4-DSR

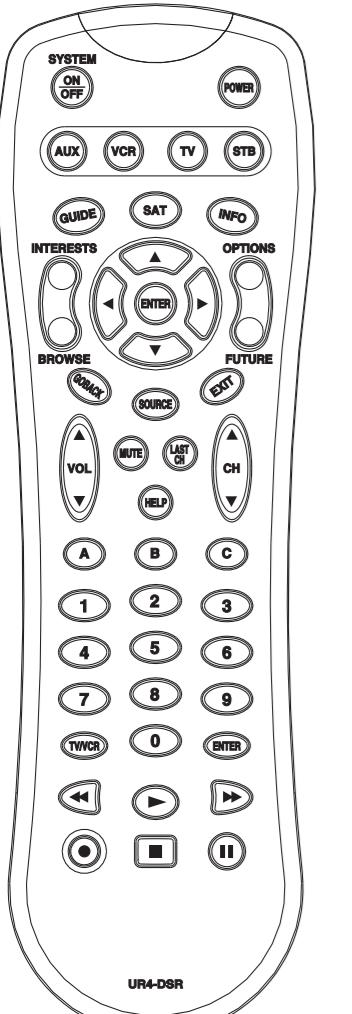

Universal Remote Control, Inc.  
[www.universalremote.com](http://www.universalremote.com)  
OEE-0050B Rev 1.5 (08/17/11)

## 1 Introduction


The remote control is designed to operate the Motorola® DSR400 Series Digital Receiver. You can also control the majority of TV, VCR/DVD and AUDIO equipment on the market as shown below.

- STB** : Digital Receiver  
**TV** : Televisions  
**VCR** : VCRs and DVD  
**AUX** : Audio Receivers, DMX & DCR, TIVO, etc.


## 2 Replacing Batteries

Before you program or operate the remote control, you must install two new AAA alkaline batteries.

- STEP1** Remove the battery compartment cover on the back of your remote control.
- STEP2** Check battery polarity carefully, and install the batteries as shown in the illustration below.
- STEP3** Replace the battery compartment cover.

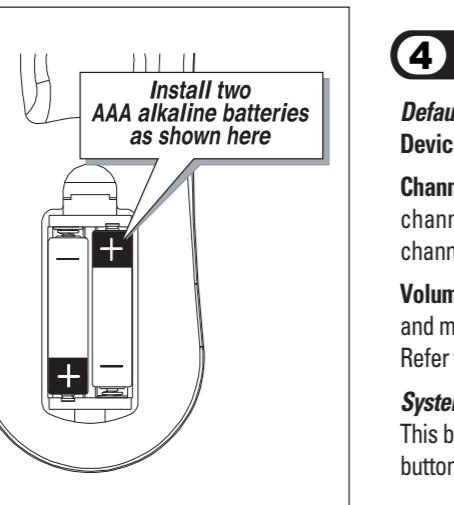

## 3 Button Functions

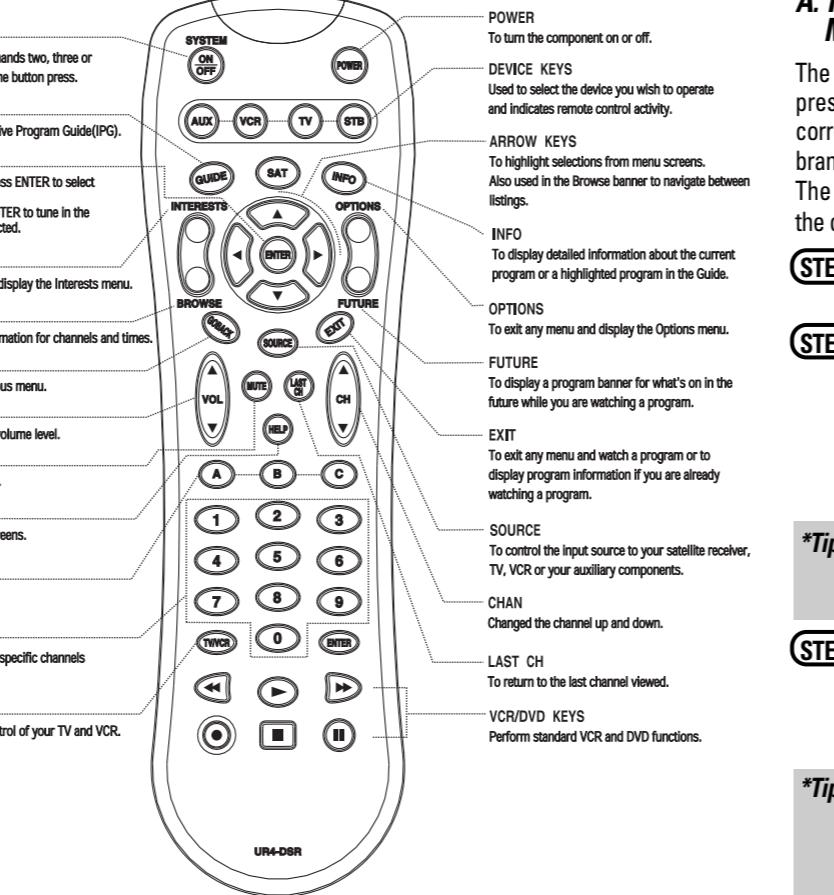

## 4 Operations

### Default State :

Device Default: Motorola® DSR400 Series.

Channel Default: STB channel and number keys through the STB, with the option of controlling channel and number keys through the TV or VCR. Refer to section F for programming the channel and number keys through your TV or VCR.

Volume Default: STB volume and mute through the TV, with the option of controlling volume and mute through the STB or AUDIO.

Refer to section G for programming the volume and mute through your STB or AUDIO.

### System On/Off button :

This button is designed to send out power commands for two, three or all four devices with one button press. Please refer to section E for details.

## 5 Programming the Remote Control

### A. Three-Digit Code Programming Method.

The remote control can be programmed by pressing in a three digit code number that corresponds to particular manufacturers and brands of Audio/Video equipment. The three-digit code numbers are listed in the code table of the instruction manual.

- STEP1** Turn on the equipment you wish to operate.

- STEP2** Press the [DEVICE] button (TV, VCR or AUX) to be programmed and the [ENTER] button simultaneously for 3 seconds. The device LED will turn on.

- \*Tip: The device LED will light on for 20 seconds. The next step must be entered while LED is on.
- STEP3** Press the [CH ▲] or [CH ▼] button one step at a time or keep it pressed. The remote will emit a series of Power ON/OFF commands. Release the [CH ▲] or [CH ▼] button as soon as the equipment turns off.

- \*Tip: The device LED will stay lit for 20 seconds. The next step must be entered while the LED is on.
- STEP4** Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables.

- \*Tip: The equipment will turn off when the correct three-digit code number has been entered. You can verify you have selected the correct code by pressing the [POWER] button, the equipment should either turn on or off.
- STEP5** Press the same [DEVICE] button to store the code. The Device LED will blink twice to confirm that the code has been stored.

\*Note : If there is more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

- STEP6** Store the three-digit code number by pressing the same [DEVICE] button once again. The device LED will blink twice to confirm that the code has been stored.

\*Note : Try all the functions on the remote control. If any of the functions do not work as they should, repeat from Step 2 using the next three-digit code number from the same brand list.

- \*Tip: The device LED will turn on for 20 seconds. The next step must be entered while the LED is on.

- STEP7** Press the [INFO] button.

The device LED will blink number of times indicating the number of each digit of the code number. Each digit is separated by a 1 second interval of the LED being turned off.

**STEP4** Press the [CH ▲] button to save the power commands you stored. The [STB] button will blink twice to confirm the saving.

### F Programming Channel Control.

By following the steps below, the user can program the channel controls (Channel Up, Channel Down and Last) from one device to operate in another device mode. The default channel control settings on the remote control is as follows:

**STB** : STB      **TV** : STB  
**VCR** : VCR      **AUX** : AUX

If you wish to store the TV channel control in TV mode, use the following steps.

**STEP1** Press the [TV] button and the [ENTER] button simultaneously for 3 seconds.

\*Tip: The device LED will light on for 20 seconds. The next step must be entered while the LED is on.

**STEP2** Press the [TV] button to pick up the TV code table.

**STEP3** Point the remote control toward the equipment and enter the three-digit code number assigned to your TV brand from the code tables.

\*Tip: You can verify that you selected the correct code by pressing the [POWER] button. The equipment should either turn on or off.

**STEP4** Store the three-digit code number by pressing the [AUX] button once again. The device LED will blink twice to confirm that the code has been stored.

**To return to original state:**  
If you wish to restore the STB channel control in TV mode, repeat the above steps by pressing [STB] in **STEP3**.

**E. Programming The System On/Off Button.**  
This is designed to program the System On/Off button so that it can send out up to four power on/off commands with one button press.

**STEP1** Press the [STB] button.

**STEP2** Press the [SYSTEM] button and the [ENTER] button simultaneously for 3 seconds. The [STB] button will turn on for 20 seconds.

**STEP3** Press the [STB] button and the [POWER] button you wish to store in the System On/Off button and repeat this until you stored all the power commands into the System On/Off button.

**STB** : TV      **TV** : TV  
**VCR** : TV      **AUX** : AUX

If you wish to store the STB volume control in STB mode, use the following steps.

**STEP1** Press the [STB] button and the [ENTER] button simultaneously for 3 seconds.

**\*Tip:** The device LED will light on for 20 seconds. The next step must be entered while the LED is on.

**STEP2** Press the [VOL ▲] button.

**STEP3** Press the [STB] button.  
The device LED will blink twice to confirm the programming.

#### To return to original state:

If you wish to restore the TV volume control in STB mode, repeat the above steps by pressing [TV] in **STEP3**.

#### H. Programming For Advanced Function.

In the STB mode, the A, B and C buttons can be programmed to act as a macro or favorite channel button to send out up to 10 commands with one button press.

**STEP1** Press the [STB] button to select the STB mode

**STEP2** Press the [A (or B,C)] button and [ENTER] button simultaneously for 3 seconds. The STB device LED will turn on for 20 seconds.

**STEP3** Press up to 10 buttons you wish to store. The STB device LED will blink once for each command entered.

**STEP4** Press the [CH ▲] button to store the functions that are selected. The STB device LED will blink twice to confirm the storage of functions.

#### I. LOW BATTERY WARNING.

When the battery is low and needs to be replaced with fresh batteries, the remote control LED will blink 2 times in sequence whenever a [POWER] button is pressed to turn on equipment.

#### J. Memory Lock System.

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

#### K. Write your device Set-up codes.

TV Set-up Code Number:

VCR Set-up Code Number:

AUX Set-up Code Number:

## 6 Set-up Code Tables

### STB

Remote	Converter	Code No
UR4-DSR	Motorola DSR Series	003

### TV

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ADMIRAL	072 081 160 161 096

### TV

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
HANNSPRE	046

### VCR

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
SEARS	004 007 015 028 030 057 082 094 143 160 052 164

### VCR

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
SINGER	024

### VCR(DVD)

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
MARANTZ	253 242 148

### AUX(AUDIO)

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
HARMAN KARDON	153 148 162 060 066 115

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
HP	027 039 214 085

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
SHERWOOD	100

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
TANDY	034 010

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
NAO	247 239 112

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
INFINITI	164

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
SPECTRONIC	112

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
TECHNICS	031 070

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
OPPO	125

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
AMPRO	073

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
EMERSON	006 029 035 037 129 013 053 017 025 027 031

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
THOMAS	034

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
PHILIPS	253 237 214 242 168 164 127

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
AMPRO	001

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
GO VIDEO	132 155 040 136

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
WARDS	003 004 017 024 031 034 040 053 054 131

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
YAMAHA	249 226 181 120

### TV

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
SEARS	004 007 015 028 030 057 082 094 143 160 052 164

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
SINGER	024

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
SONY	001 057 058 003 052 053 031 154 171 009 034

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
SOUNDDESIGN	034

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
STS	004

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
SYMPHONIC	034

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
DAEWOO	005 108 111 117 017 065 007 010

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
TAYUNG	043