

Programming Procedure

The Moxi® remote allows you to access, control, and enjoy the many features of your Moxi® product.

The Moxi remote operates the Moxi product. Once programmed, this remote also controls the volume and mute functions of your TV or audio device. The power button on the remote also turns on your TV and audio device.

Use the tables in this pamphlet to find the codes for your brand of TV and audio device.

If your brand is not listed, or if the given codes do not work, follow the instructions in the Programming by Search section.

Programming the TV by code

Follow the steps below to program the remote to control power and volume for your TV.

- 1. In front of the TV, press and hold the **MOXI** and **OK** buttons simultaneously on the Moxi remote, until the LED at the top of the remote blinks twice.
- 2. Using the number buttons on the remote, enter one of the codes for the TV from the reference tables. When you enter a code correctly, the LED blinks twice. If it blinks once, the code was invalid—try entering the code again. If the code is correct for your device, then the device responds automatically (turns on or off).
- 3. If the TV does not respond, start over using another listed code. Repeat until successful, or use the Programming by Search procedure.

Programming the audio device by code

Follow the steps below to program the remote to control power for your TV as well as power and volume for an audio device.

- 1. In front of the device, press and hold the **MOXI** and **OK** buttons simultaneously on the Moxi remote, until the LED at the top of the remote blinks twice.
- 2. Using the number buttons on the remote, enter one of the codes for your device from the reference tables. When you enter a code correctly, the LED blinks twice. If it blinks once, the code was invalid—try entering the code again. If the code was correct for your device, then the device responds automatically (turns on or off).
- 3. If the other device does not respond, repeat the previous steps using another listed code. Repeat until successful, or use the Programming by Search procedure.

Replacing batteries

When replacing AA batteries, use only high-quality, non-corrosive batteries designed for use in electronic equipment.

Resetting to factory default

Press the **Moxi** and **OK** buttons simultaneously, hold until the LED light blinks twice, and then press **clear, clear, clear**.

Programming by search

If your TV or audio devices are not listed or do not respond to the codes listed, try programming by search. Programming by search allows the remote to cycle through codes to find one that works with your TV or other device.

- 1. In front of the device, on the Moxi remote, press and hold the **MOXI** and **OK** buttons simultaneously until the LED at the top of the remote blinks twice.
- 2. Slowly, press the **ch +** button repeatedly to advance through the code list until the device responds (turns on or off).
- 3. Once the device responds, press the **OK** button to set the current code.
- 4. Press the **power** button on the remote control. If the device does not respond, repeat the previous steps pressing the **ch+** button more slowly.

More at MyMoxi.com

The list of supported remote codes are frequently updated as new electronic devices become available. For the latest list of codes, please visit www.mymoxi.com.

Older devices

Some older devices may not be supported. If the device still fails to respond, use its original remote to control it.

TV Codes		
Brand	Code	
Admiral	026, 054, 211, 213	
Advent	072, 094, 425, 447, 463	
Adventura	047	
Aiwa	214, 471	
Akai	053, 462, 473, 522, 524, 547, 572, 586	
Amark	023, 215	
Amstrad	157	
Anam	217, 218, 219, 220, 221, 222, 223	
AOC	053	
APEX	030, 038, 427	
Audiovox	191, 220, 465	
Belcor	073	
Bell &	211, 213	
Howell		
BenQ	271	
Broksonic	165, 167	
Brokwoo d	073	
Candle	068, 091	
Centurion	095, 107, 108	
Citizen	068, 091, 211, 213, 233	
Coby	558	
Concerto	073, 095	
Contec	147	
Coronado	023	
Craig	223	
Crown	023	
Curtis	016, 054,	
Mathes	107, 108, 211, 213	
Daewoo	051, 068, 073, 095, 158, 159, 189, 191, 194, 196, 197, 198, 200, 202, 204, 205, 206, 207, 209	
Daytron	073, 095, 107, 108	
Dell	072, 0940	
Diamond Vision	563	
Dumont	073	

TV Codes		
Brand	Code	
Dynex	167, 415, 424, 567, 577	
Electr Home	073, 095	
Elektra	353	
Element	459	
Emerson	016, 023, 053, 064, 103, 139, 158, 159, 164, 165, 166, 167, 168, 169, 392, 400, 401, 402, 408, 415, 424, 507, 567, 577, 590	
Envision	073, 095	
ESA	454, 456, 538	
Fisher	355, 356	
Fujitsu	460, 469, 560	
Funai	047, 048, 157, 168, 211	
Gateway	426	
GE	015, 018, 042, 044, 049, 054, 055, 068, 073, 090, 092, 095, 101, 102, 103, 389, 390, 396, 403, 406, 407	
Gibralta	023, 048, 053, 068, 073, 090, 095, 107, 108, 233, 360	
Goldstar (LG)	023, 053, 068, 073, 090, 107, 108, 233, 360, 361	
Gradiente	104	
Grundig	233	
Go Video	443	
Haier	053, 073, 095, 108, 427, 519, 596, 587	
HP	072	
Hall Mark	073, 095	

TV Codes		
Brand	Code	
Hitachi	023, 068, 095, 096, 097, 098, 099, 100	
Hyundai	453	
iLo	524, 586	
Initial	470	
Inkel	364	
Insignia	167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586	
JC Penny	039, 053, 068, 073, 092, 095, 102, 355	
Jensen	062, 461	
JVC	104, 105, 106, 396, 397, 410, 589	
Kawasho	073, 095	
KMC	023	
Konka	445, 589	
KTV	023, 053, 233, 366	
Kosch	279	
Kurazai	211, 213	
LG (Gold-star)	023, 053, 068, 073, 090, 107, 108, 233, 360, 361, 424, 567, 577	
Lodgenet	211, 213	
Logik	211, 213	
Luxman	068, 073, 095	
LXI	024, 026, 157, 355, 388	
Mag-navox	470, 472, 549, 595	
Mag-navox (Philips)	023, 068, 073, 089, 090, 091, 092, 093, 094, 134, 385, 387, 397, 404, 463	
Majestic	211, 213	
Marantz	053, 107, 108, 109	
Matsui	582, 583, 585	

TV Codes		
Brand	Code	
Maxent	426, 533, 534	
Mcintosh	555	
Megatron	215	
Memorex	090, 211, 213, 355, 388, 405, 423, 459	
MGA/Mit-subishi	053, 068, 073, 090, 095, 107, 108, 109, 110, 216, 384, 394, 395, 398, 399, 417	
Mintek	470	
Mont-gomery Ward	108, 022, 023, 026, 053, 071, 072, 211, 213	
NEC	028, 068, 090, 108, 200, 464	
Norcent	455, 472	
O'levia	073, 519, 541, 587	
Orion	019, 159, 160, 161, 162, 163, 382, 423, 424, 558	
Pana-sonic	042, 043, 044, 045, 046, 419, 429	
Philco	053, 072, 023, 068, 071, 091, 463	
Philips (Mag-navox)	023, 068, 071, 072, 073, 089, 090, 091, 092, 093, 094, 134, 385, 387, 397, 404, 463	
Pilot	073, 094, 233	
Pioneer	019, 111, 144, 383, 551	
Planar	474	
Polaroid	384, 394, 459	
Portland	023, 068	
ProScan	055, 070	
Prima	072	

TV Codes		
Brand	Code	
Proton	090, 371, 372	
Protron	457, 467	
Proview	459	
Pulsar	073	
Quasar	044	
Radio Shack	073	
RCA	053, 042, 052, 054, 055, 068, 069, 070, 416	
Realistic	022, 166, 168	
Runco	525	
Sampo	090, 108	
Samsung	147, 015, 016, 017, 023, 031, 090, 107, 108, 134, 151, 153, 386, 411, 424, 508, 577	
Sansui	423, 424	
Sanyo	353, 355, 356, 376, 377	
Sceptre	468	
Scott	090, 108, 168, 561	
Sears	023, 030, 031, 038, 039, 068, 353, 355, 356	
Sharp	028, 016, 022, 023, 024, 025, 026, 027, 029, 393, 395, 409	
Signature 1330	023, 026, 108, 211, 213	
Sony	014, 020, 021, 178, 540	
Sounde-sign	091	
Soyo	562	
Square-view	157	
SunBrite TV	587	
Super-scan	419	
Supre-Macy	380	

TV Codes		
Brand	Code	
SVA	592	
Sylvania	071, 068, 072, 090, 091, 092, 093, 107, 108, 157, 158, 419, 466, 590	
Sym-phonie	047, 157	
Tatung	044, 446	
Tech-wood	068	
Teknika	023, 068, 072, 168, 213, 463, 091	
Telerent	023, 213	
Tera	381	
Tevion	065, 414	
TMK	068, 090	
Toshiba	030, 031, 038, 039, 423, 571	
Totevision	233	
Universal	068, 102	
Vidtech	068	
ViewS-onic	428, 513, 515, 527, 528, 529, 533, 534, 538, 530, 531, 532, 535, 536, 537, 538, 539	
Viore	031, 508, 598, 600, 601, 602	
Visco	589	
Vizio	062, 073, 095, 454, 538, 561, 573, 053	
Wards	068, 090	
Westing-house	020, 458, 463	
White	211, 408, 449	
Westing-house		
XR-100	213	
Yamaha	068	
York	090, 108	
Zenith	047, 048, 049, 050, 051, 391, 405, 406, 424, 434, 567, 577, 594	

Audio Device Codes		
Brand	Code	
ADC	318	
Adcom	325	
Aiwa	176, 301, 521	
Akai	142	
Bose	302, 440	
Carver	155, 176, 180	
Daewoo	501	
Denon	262, 307	
Everquest	136	
Fisher	063, 180	
Fosgate	305	
Audionics		
Goldstar (LG)	036, 308	
Harman	130, 257,	
Kardon	305, 306	
Hitachi	240	
Jensen	140	
JVC	114, 241	
Kenwood	063, 176, 277, 444	
Krol	176	
LG (Gold-star)	036, 308	
Luxman	281	
Mag-navox (Philips)	080, 119, 184, 502, 503, 504, 433	
Marantz	282, 283, 284, 285, 516, 517, 518, 520	
Mcintosh	557	
Mission	176	
NSM	176	
NAD	286	
Onkyo	126, 171, 304, 543, 579	
Optimus	142, 229, 321	
Pana-sonic	032, 074, 184, 438, 441	
Para-sound	323	
Philips	080, 119, 184, 502, 503, 504, 433	
Pioneer	123, 137, 251, 298	
Quasar	032, 184	
Radio Shack	229, 267	
RCA	119, 439	

Audio Device Codes		
Brand	Code	
Realistic	226, 268	
Rotal	310	
SAE	176	
Samsung	546, 492	
DVD / Reciever		
Sansui	283	
Sanyo	195, 309	
Scientific	312	
Atlanta		
Scott	272	
Sharp	294	
Sher-wood	229, 267, 505, 506	
Sony	041, 057, 067, 232, 287, 292, 442	
Sounde-sign	083, 088, 148, 239, 242, 265, 311, 320	
SSI	318	
Taekwang	142	
Teac	314, 316	
Technics	032, 184, 512	
Victor	114, 241	
Wards	063, 114, 241	
Yamaha	145, 254, 280, 303, 521, 542, 579	
Zenith	036, 083, 088, 239, 265	

Remote Control Programming and Use Instructions


***buy** jumps to buying PPV and VOD shows
ticker displays and hides SuperTicker™
power turns the TV and other audio devices on and off
Moxi lens jumps to the Video on Demand category
live TV jumps to full-screen live TV

play starts a program or photo slideshow
rew multi-speed rewind for playback (press multiple times to select speed)
fwd multi-speed fast forward for playback of stored or recorded video (press multiple times to select the speed)
rec starts recording a show
stop stops a program or photo slideshow
pause pauses a live or recorded show, or photo slideshow
replay jumps back seven seconds, moves the Moxi Menu back one day
skip jumps ahead in stored or recorded video (30 second default), moves the Moxi Menu forward one day

number tunes directly to channels, enter text in menus, make choices in games
1 press twice to backspace during text entry
0 press twice to add a space during text entry
clear deletes items (recorded shows and photos) from menus and clears elements from full screen view
enter executes numeric and text entries

info displays additional information about the selected item
zoom toggles between an open Moxi Menu and full-screen TV without losing menu position
arrow navigate menus, play games (hold for turbo speed), and exit most menus (hold left arrow for turbo speed)
OK selects or activates the chosen item
back jumps back 15 minutes, shows previous note page, jumps 30 minutes in the Moxi Menu, goes to the previous photo
next jumps forward 15 minutes, shows next note page, jumps 30 minutes in the Moxi Menu, goes to the next photo
MOXI takes you back to the Channels category, and then back to full screen

vol adjust the audio volume on the TV or audio device
mute toggles sound on and off
jump goes to the last viewed channel.
ch change channels or pages through vertical menus (hold for turbo speed)

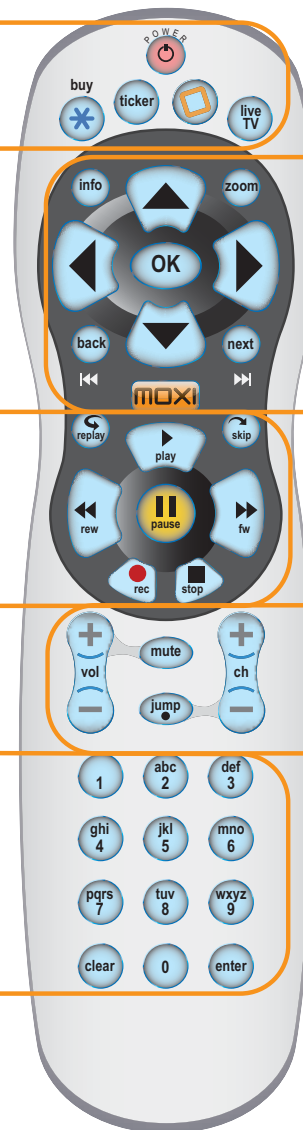

moxi