

Operating Instructions For Charter Communications 4-in-1 Remote Control

UR4-EXP-CHD2



Universal Remote Control, Inc.

www.universalremote.com
OCE-0005H Rev 02 (03/09/04)

1 Introduction


The remote control is designed to operate the Scientific-Atlanta Explorer and Motorola DCT set top boxes. You can also control TV's, VCR's DVD's and Audio equipment.

CABLE : Cable Converters
TV : Televisions **VCR** : VCRs and DVDs
AUX : Audio Receivers, DMX, DCR, etc.

2 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

- STEP1** Remove the battery compartment cover on the back of your remote control.
- STEP2** Check battery polarity carefully, and install the batteries as shown in the illustration below.
- STEP3** Replace the battery compartment cover.

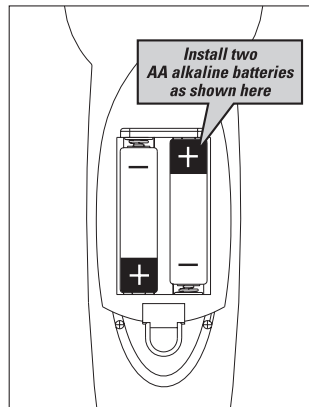

4 Operations


Default State:

Device Default set to Cable for SA Explorer series. For Motorola DCT series re-program CBL to code 002.

Volume Default: TV volume and mute through the TV, with the option of controlling volume and mute through the Cable box or Audio. Refer to section G for programming the volume and mute through your Cable box or Audio.

Channel Default: CABLE channel and number keys through the CABLE, with the option of controlling channel and number keys through the TV or VCR. Refer to section F for programming the channel and number keys through your TV or VCR.

3 Button Functions

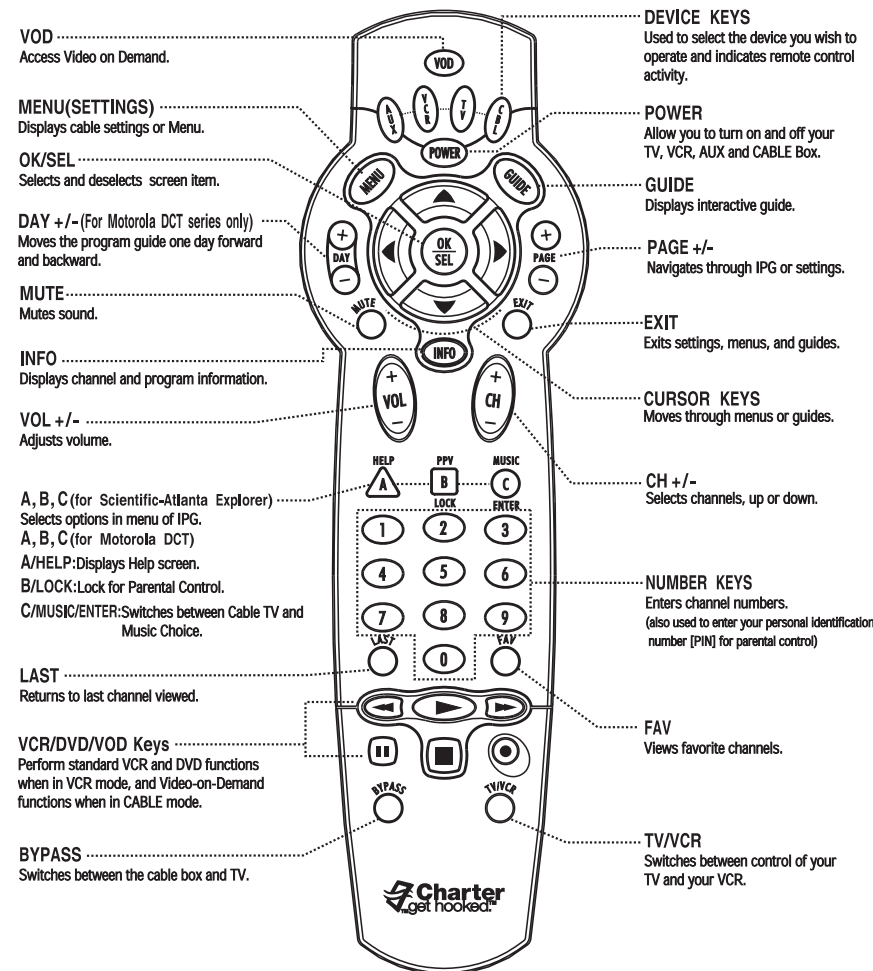

5 Programming the Remote Control

A. Three-Digit Code Programming Method.

The remote control can be programmed by entering in a three-digit code number that corresponds to a particular manufacturer or brand of Audio/Video equipment. The three-digit code numbers are listed in the code table of the instruction manual.

- STEP1** Turn on the equipment you wish to program. (TV, VCR, DVD or AUX)
- STEP2** Press the [SELECT] button and [MUTE] button simultaneously for 3 seconds. The device LED's blink in sequence (TV-VCR-AUX-CBL-TV)
- STEP3** Release the buttons when the desired device button is blinking (the device LED will then remain lit).

***Tip:** The device LED will stay lit for 20 seconds. The next step must be entered while the LED is on.

- STEP4** Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables.

***Tip:** The equipment will turn off when the correct three-digit code number has been entered. You can verify that you selected the correct code by pressing the [POWER] button. The equipment should turn on or turn off.

***Note:** If there is more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

- STEP5** Store the three-digit code number by pressing the [SELECT] button. The device LED will blink twice to confirm that the code has been stored.

***Note:** Try all the functions on the remote control. If any of the functions do not work as they should, repeat from Step 2 using the next three-digit code number from the same brand list.

B. Auto Search Method.

If the three-digit code numbers assigned to your brand do not turn off your equipment or the code tables do not list your brand, you can use the **Auto Search Method to find the correct three-digit code number for your equipment by the following steps:**

- STEP1** Turn on the equipment you wish to program. (TV, VCR, DVD or AUX)
- STEP2** Press the [SELECT] button and [MUTE] button simultaneously for 3 seconds. The device LED's blink in sequence (TV-VCR-AUX-CBL-TV)
- STEP3** Release the buttons when the desired device button is blinking (the device LED will then remain lit).

***Tip:** The device LED will stay lit for 20 seconds. The next step must be entered while LED is on.

- STEP4** Press the [CH+] or [CH-] button one at a time or keep it pressed. The remote will emit a series of power on/off commands. Release the [CH+] or [CH-] button as soon as the equipment turns off.

***Tip:** You can verify that you selected the correct code by pressing the [POWER] button. The equipment should either turn on or turn off.

- STEP5** Press the [SELECT] button to store the code. The device LED will blink twice to confirm that the code has been stored.

C. To Find the Three Digit Code Number That was Stored in the Device.

- STEP1** Press the [SELECT] button and [MUTE] button simultaneously for 3 seconds. The device LED's blink in sequence (TV-VCR-AUX-CBL-TV)

- STEP2** Release the buttons when the desired device button is blinking (the device LED will then remain lit).

***Tip:** The device LED will stay lit for 20 seconds. The next step must be entered while the LED is on.

- STEP3** Press the [INFO] button. The device LED will blink number of times indicating the number of each digit of the code number. Each digit is separated by a 1 second interval of the LED being turned off.

Example: One blink, three blinks and eight blinks with an interval of 1 second of LED being turned off, indicates the code number 138.

***Note:** Ten blinks is equal to the number 0.

D. Programming a Second TV to AUX Mode.

- STEP1** Turn on the TV you wish to program.
- STEP2** Press the [SELECT] button and [MUTE] button simultaneously for 3 seconds. The device LED's blink in sequence (TV-VCR-AUX-CBL-TV)
- STEP3** Release the buttons when the [AUX] device LED is blinking (the [AUX] device LED will then remain lit).
- STEP4** Hold down the [MUTE] button. The device LED's will begin blinking in sequence again. Release the [MUTE] button when the [TV] device LED is blinking (the [TV] device LED will then remain lit).

***Tip:** The device LED will stay lit for 20 seconds. The next step must be entered while the LED is on.

- STEP5** Point the remote control toward the equipment and enter the three-digit code number assigned to your TV brand from the code tables.

***Tip:** The equipment will turn off when the correct three-digit code number has been entered. You can verify that you selected the correct code by pressing the [POWER] button. The equipment should turn on or turn off.

- STEP6** Store the three-digit code number by pressing the [SELECT] button. The [AUX] device LED will blink twice to confirm that the code has been stored.

E. Programming the VOD Button.

This is designed to program the VOD button so that it can access video on demand with one button press.

The VOD button is factory defaulted to Ch 999. To re-program to a different channel:

- STEP1** Press the [CBL] button.
- STEP2** Press the [VOD] button and the [SELECT] button simultaneously for 3 seconds. The [CBL] button will turn on for 20 seconds.
- STEP3** Press the Numbers of the desired channel to become the new Macro. (e.g. 123)
- STEP4** Press the [CH+] button to save the new Macro you stored. The [CBL] button will blink twice to confirm.

F. Programming Channel Control.

By following the steps below, the you can program the channel controls (channel UP, and channel DOWN) from one device to operate in another device mode. The default channel control settings on the remote control is as follows:

CBL : CBL	TV : CBL
VCR : VCR	AUX : AUX

If you wish to store the TV channel control in TV mode, use the following steps.

- STEP1** Press the [SELECT] button and [MUTE] button simultaneously for 3 seconds. The device LED's blink in sequence (TV-VCR-AUX-CBL-TV)

- STEP2** Release the buttons when the [TV] device LED is blinking (the [TV] device LED will then remain lit).

***Tip:** The device LED will stay lit for 20 seconds. The next step must be entered while the LED is on.

- STEP3** Press the [VOL-] button.

- STEP4** Press the [TV] button. The device LED will blink twice to confirm the programming.

To return to original state:

If you wish to restore the CABLE channel control in TV mode, repeat the above steps by pressing [CBL] in **STEP4**.

G. Programming Volume Control.

By following the steps below, the you can program the volume controls (Volume UP, Volume Down and MUTE) from one device to operate in another device mode. The default volume control settings on the remote control is as follows:

CBL : TV	TV : TV
VCR : TV	AUX : AUX

If you wish to store the CBL volume control in CBL mode, use the following steps.

- STEP1** Press the [SELECT] button and [MUTE] button simultaneously for 3 seconds. The device LED's blink in sequence (TV-VCR-AUX-CBL-TV)
- STEP2** Release the buttons when the [CBL] device LED is blinking (the [CBL] device LED will then remain lit).

***Tip:** The device LED will stay lit for 20 seconds. The next step must be entered while the LED is on.

- STEP3** Press the [VOL+] button.

- STEP4** Press the [CBL] button. The device LED will blink twice to confirm the programming.

To return to original state:

If you wish to restore the TV volume control in CBL mode, repeat the above steps by pressing [TV] in **STEP4**.

H. Programming For Advanced Functions

The A, B and C buttons can be re-programmed for the “Motorola DCT” series converter only. To act as Macro button’s to send out up to 10 commands with the press of one button.

STEP1 Press the [CBL] button to select the CBL mode.

STEP2 Press the [A, B, or C] button and [SELECT] button simultaneously for 3 seconds. The [CBL] device LED will turn on for 20 seconds.

STEP3 Press up to 10 buttons you wish to store. The [CBL] device LED will blink once for each command entered.

STEP4 Press the [CH+] button to store the functions that were selected. The [CBL] device LED will blink twice to confirm the storage of functions.

I. Low Battery Warning.

When the batteries are low and need to be replaced with fresh batteries, the remote control LED will blink 2 times in sequence whenever a [POWER] button is pressed.

J. Memory Lock System.

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

K. Write your device Set-up codes.

TV Set-up Code Number :
VCR Set-up Code Number :
AUX Set-up Code Number :

6 Set-up Code Tables

CABLE TV

Remote	Converter	Code No
Scientific Atlanta	Explorer Series	001
Motorola	DCT Series, CFT2200	002

TV

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ADMIRAL	072 081 160 161 096
ADVENT	247
AIKO	103
AKAI	006 146 248
ALARON	028
AMARK	112 143
AMERICA ACTION	043
AMPRO	073
ANAM	043 054 055 056 080 112
AOC	058 006 004 112
APEX DIGITAL	015 226
AUDIOVOX	076 103 043
BAYSONIC	043
BELL&HOWELL	072
BRADFORD	043
BROKSONIC	096
CANDLE	006 002 003 004
CAPEHART	058
CARVER	164
CELEBRITY	001
CETRONIC	043
CINERAL	103 120
CITIZEN	006 002 003 004 101 103 143
CLASSIC	043
CONCERTO	004
CONTEC	043 051
CORONADO	143
CRAIG	043 054 028
CROSLEY	164
CROWN	043 143
CURTIS MATHES	006 004 101 143 011 072 081 120 164
CXC	043
DAEWOO	076 103 055 004 127 143 016 043 044 125 120
DAYTRON	004 143
DENON	011
DUMONT	004 073
DWIN	161
DYNASTY	043
DYNATECH	062
ELECTROBAND	001
ELECTROHOME	024 076 143
EMERSON	005 028 043 048 076 096 155 004 051 143 151 153 154
FISHER	007 057
FUJITSU	164 028 198 246
FUNAI	028 043 052 249
FUTURETECH	043
GATEWAY	242
GE	006 073 144 160 161 004 008 009 034 056 074 091 155 081 120
GIBRALTER	004 073
GOLDSTAR	004 106 119 110 112 113 127 143
GRUNPY	028 043
HALL MARK	004
HARLEY DAVIDSON	028
HARMAN KARDON	164
HARVARD	043

TV

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
HITACHI	163 004 007 009 011 072 010 012 023 075 143 158
INFINITY	164
INKEL	129
INTEQ	073
JBL	164
JCB	001
JCPENNEY	004 006 008 024 030 065 101 143 156 160
JENSEN	013
JVC	038 001 034 083 206
KENWOOD	006 001
KLOSS	002 059
KTV	006 043 143 154
LG	004 106 119 110 112 113 127 143
LODGENET	072
LOEWE	207 164
LOGIK	072
LUXMAN	004
LXI	007 015 052 081 160 164
MAGNAVOX	006 003 004 022 059 060 061 063 064 127 164 094 160 028
MAJESTIC	072
MARANTZ	164 006
MATSUI	164
MATSUSHITA	080
MEGATRON	004
MEMOREX	004 007 072 028 096
MEIZ	088
MGA	024 006 004 042
MIDLAND	073
MINERVA	088
MINUTZ	008
MITSUBISHI	109 024 042 004 040 146 028 081 225
MOTOROLA	081
MTIC	006 004 062 101
MULTITECH	043
NAD	015 025
NEC	006 134 040 056 007 019 024 237
NIKEI	043
NIKKO	103
NTC	103
ONKING	043
ONWA	043
OPTIMUS	080
OPTONICA	019 081
ORION	096 201 202 203 204 205 028
PANASONIC	034 056 080 164 208 222
PHILCO	006 003 004 024 056 059 060 063 064 127 143 164
PHILIPS	164 005 038 093 127 006 003 004 059 210
PIONEER	023 025 135 176 004 018 006 209 234
PORTLAND	004 143 103
PRISM	034
PROSCAN	144 160 161
PROTON	004 058 143 171 173 112
QUASAR	034 056
RADIO SHACK	004 019 127 143 043
RCA	160 161 144 156 065 006 004 023 024 056 074 152 081
REALISTIC	007 019
RUNCO	072 073
SAMPO	006 004 058 242
SAMSUNG	004 101 127 133 143 160 089 105 211 228 229
SANSEI	120
SANSUI	096
SANYO	007 053 057 082 020
SCOTCH	004
SCOTT	004 005 028 043 048 143
SEARS	004 007 015 028 030 057 082 094 143 160 052 164
SEMIVOX	043

TV

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
SEMP	015
SHARP	081 014 019 028 004 022 143 175
SIGNATURE	072
SONY	001 126 139
SOUNDESIGN	003 004 028 043
SPECTRICON	112
SQUAREVIEW	052
SSS	004 043
STARLITE	043
SUPRE MACY	002
SUPREME	001
SYLVANIA	006 003 059 060 063 064 127 160 164 044 249
SYMPHONIC	052 249
TANDY	081
TATUNG	056 062
TECHNICS	034 080
TECHNOL ACE	028
TECHWOOD	004
TEKNIKA	002 003 004 024 028 043 072 101 143 103 164
TELERENT	072
TERA	172
TMK	004
TNCI	073
TOSHIBA	015 030 007 040 062 101
TOTEVISION	143
UNIVERSAL	008 009
VIDEO CONCEPTS	146
VIDIKRON	174 188 164
VIDTECH	004
WARDS	004 064 164 008 009 019 028 060 061 063 072 074 143
WESTING HOUSE	076
YAMAHA	004 006
YORK	004
MARTA	101
MATSUI	027 030
MATSUSHITA	031
MEI	031
MEMOREX	040 101 003 014 031 034 053 072 134 139 025
MGA	045 046 059
MGN TECHNOLOGY	040
MINOLTA	004 020
MITSUBISHI	059 061 051 004 046 020 045 053
MOTOROLA	031 053
MTIC	034 040
MULTITECH	024 034
NEC	012 023 043 048
NIKKO	101
NOBLEX	040
NORDMENDE	043
OLYMPUS	031
OPTIMUS	053 101
OPTONICA	053 054
ORION	025
PANASONIC	031 070 133 140 163
PENTAX	004 031 063 020
PHILCO	031 034 067 025
PHILIPS	031 034 054 067 101 150
PILOT	101
PIONEER	021 004 048
PORTLAND	108
PROFITRONIC	040
PROTEC	024
PULSAR	072
QUARTZ	014
QUASAR	031 070 133 140 163 014
RADIO SHACK	123 034
RADIX	101

VCR & TV/VCR

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ADMIRAL	025 053
AIKO	117
AIWA	034 161 101
AKAI	043 046 124 146
AMERICA ACTION	117
AMERICAN HIGH	031
AMPRO	072
ANAM	031 103
ASHA	040
AUDIO DYNAMICS	012 023 043
AUDIOVOX	101
BEAUMARK	040
BROKSONIC	035 037 129 025
CALIX	101
CANON	028 031
CAPEHART	108
CCE	024 117
CINERAL	117
CITIZEN	101 117
COLT	024
CRAIG	003 040 135 024 101
CURTIS MATHES	031 041
CYBERNEX	040
DAEWOO	005 108 111 117 017 065 007 010
DAYTRON	108
DBX	012 023 043
DYNATECH	034 053

VCR & TV/VCR

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ELECTROHOME	059 101
ELECTROPHONIC	101
EMERSON	006 029 035 037 129 153 017 025 027 031 034 036
FISHER	003 010 008 009
FUJI	031
FUNAI	034
GARRARD	034
GE	031 072 144 147 063 107 109 040 053
GO VIDEO	132 155 040 136
GOLDSTAR	101 004 012 020
HARLEY DAVIDSON	034
HARMAN KARDON	012 045
HARWOOD	024
HITACHI	004 026 034 043 063 137 150
HQ	034
HUGHES	004
INSTANTREPLAY	031
JCL	031
JCPENNEY	004 012 031 040 101
JENSEN	043
JVC	048 043 055 060 130 150 152 012 031
KEC	101 117
KENWOOD	034 150 014 048
KLH	024
KODAK	031 101
LG	101 004 012 020
LLOYD	034
LOGIK	024
LXI	003 009 017 034 101 004 106
MAGIN	040
MAGNASONIC	117
MAGNAVOX	067 031 034 068 041 156 170
MARANTZ	067 069 012 031
MARTA	101
MATSUI	027 030
MATSUSHITA	031
MEI	031
MEMOREX	040 101 003 014 031 034 053 072 134 139 025
MGA	045 046 059
MGN TECHNOLOGY	040
MINOLTA	004 020
MITSUBISHI	059 061 051 004 046 020 045 053
MOTOROLA	031 053
MTIC	034 040
MULTITECH	024 034
NEC	012 023 043 048
NIKKO	101
NOBLEX	040
NORDMENDE	043
OLYMPUS	031
OPTIMUS	053 101
OPTONICA	053 054
ORION	025
PANASONIC	031 070 133 140 163
PENTAX	004 031 063 020
PHILCO	031 034 067 025
PHILIPS	031 034 054 067 101 150
PILOT	101
PIONEER	021 004 048
PORTLAND	108
PROFITRONIC	040
PROTEC	024
PULSAR	072
QUARTZ	014
QUASAR	031 070 133 140 163 014
RADIO SHACK	123 034
RADIX	101

VCR & TV/VCR

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
RANDEX	101
RCA	107 109 144 041 031 004 020 034 040 140 147 158 053
REALISTIC	003 008 014 031 034 040 053 054 101 010
RICO	058
RUNCO	072
SALORA	014
SAMSUNG	040 017 107 109 113 115 124 122
SANKY	053
SANSUI	043 135 048 025 034
SANYO	003 014 040 134
SCOTT	017 037 129 131
SEARS	003 004 008 014 017 081 101 010 031 034
SHARP	053 031 054 159
SHINTOM	024
SHOGUN	040
SINGER	024
SONY	001 057 058 003 052 053 031 154 171 009 034
SOUNDESIGN	034
STS	004
SYLVANIA	031 034 059 067
SYMPHONIC	034
TANDY	034 010
TATUNG	043
TEAC	034 043
TECHNICS	031 070
TEKNIKA	031 034 101
THOMAS	034
TMK	006 040
TOSHIBA	017 131 004 008 059 082 150
TOTEVISION	040 101
UNITECH	040
VECTOR RESEARCH	012
VIDEO CONCEPTS	012 034 046
VIDEOSONIC	040
WARDS	003 004 017 024 031 034 040 053 054 131
WESTINGHOUSE	024 025
XR-1000	024 031 034
YAMAHA	012 034 043
ZENITH	072 034 001 058 080 101 153 048 025

**Note : For TV/VCR combination unit, Please use following steps to operate the volume control.*

STEP1 Press the [SELECT] button and [MUTE] button simultaneously for 3 seconds. The device LED's blink in sequence (TV-VCR-AUX-CBL-TV)

STEP2 Release the buttons when the [CBL] device LED is blinking (the [CBL] device LED will then remain lit).

STEP3 Press the [VOL+] button.

STEP4 Press the [VCR] button. The device LED will blink twice to confirm the programming.

DVD(VCR)

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
AIWA	202
ALPINE	221
APEX DIGITAL	251 246
ARCAM	215
CYBERHOME	220
DAEWOO	220
DENON	226 241
FUNAI	208
GE	230 231
GOLDSTAR	235 239
GO VIDEO	201
HARMAN KARDON	243
HITACHI	223
HITEKER	246
JVC	238
KENWOOD	216
KLH	210
LG	235 239
MAGNAVOX	254 237
MARANTZ	255 242
MCINTOSH	217
MEMOREX	207
MINIVISION	227
MITSUBISHI	224
NAD	247 239
NAKAMICHI	225
ONKYO	240
OPTIMUS	229
PANASONIC	228 206 226
PHILIPS	253 237 214 242
PIONEER	255 222 229
PROCEED	245
PROSCAN	230 231
RCA	230 231
SAMSUNG	236 248 201
SANSUI	205
SANYO	204
SHARP	252
SONY	232 218 203
SYLVANIA	208
SYMPHONIC	208
TATUNG	224
TECHNICS	228
THETA DIGITAL	229
TOSHIBA	233 244 219 205
VENTURER	209
YAMAHA	249 226
ZENITH	239 226 235 239

AUDIO(AUX)

MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ADC	200
ADCOM	072 082 092 161
AIWA	025 071 104 114 170 171 091 100
AKAI	139 093
AMC	125 126 127 128
ANGSTROM	142
ARCAM	141
AUDIO ACCESS	147
AUDIO ALCHEMY	135
AUDIO FILE	203
AUDIO MATRIX	077
AUDIO TECHNICA	134
B & K	096 097
BOSE	070 170 113
BRYSTON	015
CARVER	003 008 028 099 151 203 014 016 040 090

AUDIO(AUX)</